


## Technical Bulletin 102-Programming to use during Commissioning of a Boiler

When commissioning and setting the O<sub>2</sub> on an **E**, **QP**, or **Q175C** boiler, the installer must use the domestic hot water program rather than the heating program. If the application is using a **Q85S**, **Q130S**, **Q175S**, or **Q205S** series boiler for a heating only application, then the heating program should be used for commissioning and setting the O<sub>2</sub>. (In the event that a **Q85S**, **Q130S**, **Q175S**, or **Q205S** series boiler is producing domestic, hot water, the installer must use the domestic hot water program for commissioning and setting the O<sub>2</sub>.)

### NOTE

Combination boilers should be connected to domestic hot water and should not be installed as heating only boilers.

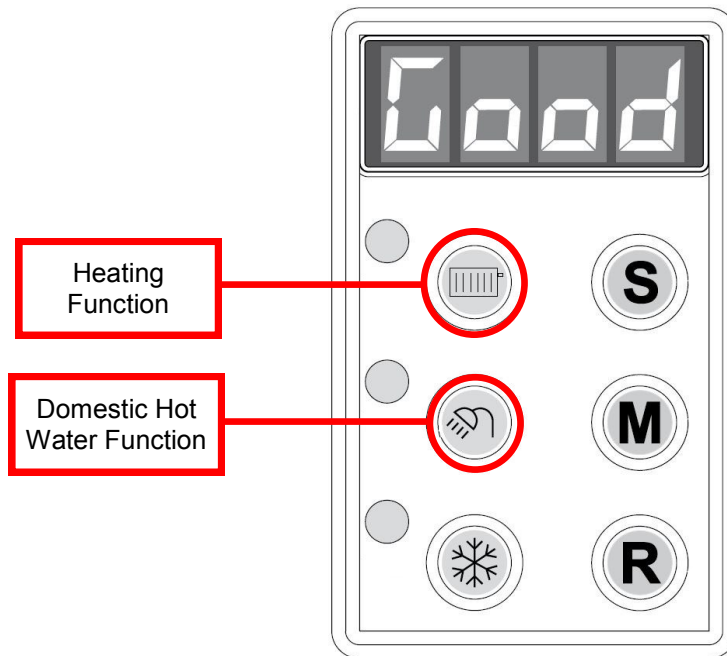

### CAUTION

Do not touch the areas at or near the heat exchanger. These areas become very hot and could cause burns.

Rinnai America Corporation • 103 International Drive, Peachtree City, GA 30269

Toll-Free: 1-800-621-9419 • Phone: 678-829-1700 • [www.rinnai.us](http://www.rinnai.us)

©2013 Rinnai America Corporation. Rinnai is continually updating and improving products; therefore, specifications are subject to change without prior notice. Local, state, provincial and federal and national fuel gas codes must be adhered to prior to and upon installation.