

When using a Rinnai condensing boiler with a snow melt system the boiler must be isolated from the snow melt loop through the use of a heat exchanger.

Water entering the boiler directly from the snow melt system may damage the boiler heat exchanger and will void the warranty on the boiler.