



Figure 1

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply. Drain all water from the appliance.
4. Remove the screw covers by pressing them down and sliding them off horizontally.
5. Remove four screws securing the front panel. Remove front panel.
6. Remove the controller bracket (on indoor models only).
7. Remove the screw and the bracket at the water flow servo assembly. Pull out the water line.
8. Remove the 4 screws attaching the water inlet to the underneath side of the water heater.
9. Disconnect the water flow servo harness at the connector.
10. Pull out the water flow servo assembly.
11. Install the new water flow servo assembly.
12. Attach the cable harness.
13. Replace the O-ring on the water inlet (included in kit). Attach the water flow assembly to the water inlet using 4 screws. The 2 shorter screws can be installed first to connect the water flow assembly to the bottom of the compartment. Then install the 2 longer screws through the water inlet.
14. Replace the O-ring on the water line (included in kit). Attach with 1 screw.
15. Install the controller bracket (on indoor models only).
16. Install the front panel using 4 screws.
17. Slide on the screw covers.
18. Turn on the water supply, power supply, and gas supply.
19. Open a hot water tap and ensure there are no leaks at the water heater.