


These clearances are to supplement the clearances specified in ANSI Z223.1 which are currently in the FFU (indoor) and W (outdoor) manuals. They apply to all water heater models. Local codes supersede these recommendations.

General Recommendations

- Avoid termination locations near a dryer vent.
- Avoid termination locations near commercial cooking exhaust.

W (Outdoor) Models

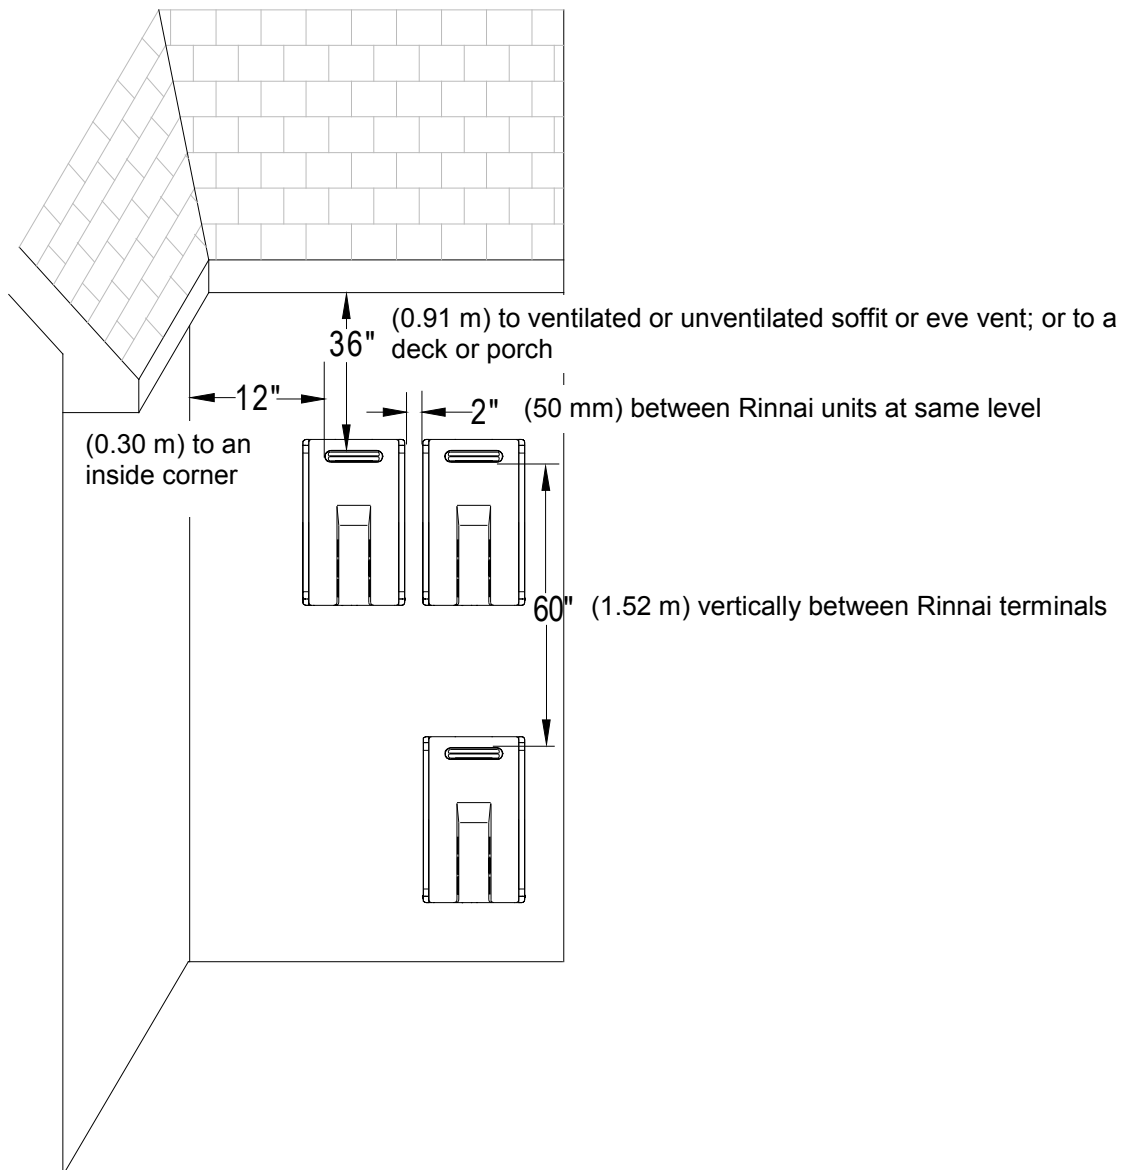

Recommended Venting Clearances

Termination of FFU (Indoor) Models

