


Condensing Termination Rain Ingress

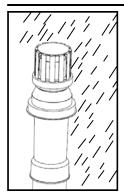

With the Ubbink Condensing Roof Discharge Termination (Part Number:184162PP) rain water may enter the exhaust vent. After the venting system is installed, the condensing tankless water heater or boiler should be installed with the condensate drain line connected. Condensate must drain and be disposed of per local codes.

• **DO NOT** Leave the appliance end of the vent assembly exposed inside the building or structure.



- **DO** Install the appliance.
- **DO** protect the building or structure by placing a container or plastic bag below the appliance end of the vent assembly if the appliance is not installed immediately after the vent system installation.

